



- 1 OIL PRESSURE(+12V)
- 2 HIGH BEAM(+12V)
- 3 FLASH LIGHT-RIGHT(+12V)
- 4 FLASH LIGHT-LEFT(+12V)
- 5 FUEL GAUGE SENSOR(-)
- 6 GROUND(-)
- 7 EMPTY
- 8 KEY ON POWER(+12V)
- 9 TEMPERATURE(-)
- 10 COIL POWER(+12V)

1. PLEASE REMOVE THE ORIGINAL METER AND INSTALL THE KOSO RADAR SERIES SPEEDOMETER, THEN FIX THE CABLE WIRE AND METER.
2. CONNECT THE RPM SENSOR WIRING TO THE IGNITION COIL POSITIVE ELECTRODE.
3. REPLACE THE ORIGINAL WATER TEMPERATURE SENSOR WITH THE KOSO WATER TEMPERATURE SENSOR.

**⚠ CAUTION!** PLEASE MAKE SURE THAT THE IGNITION COIL POSITIVE ELECTRODE BEFORE CONNECTING THE RPM SENSOR WIRING! WRONG INSTALLATION WILL CAUSE THE METER BROKEN!