



- 1 EMPTY
- 2 FUEL GAUGE SENSOR(-)
- 3 GROUND(-)
- 4 HIGH BEAM(+ 12V)
- 5 OIL PRESSURE(+ 12V)
- 6 OIL PRESSURE(+ 12V)
- 7 FLASH LIGHT-LEFT(+ 12V)
- 8 FLASH LIGHT-RIGHT(+ 12V)

- 9 POWER(DC + 12V)
- 10 ANTI-THIEF LIGHT(+ 12V) FOR U.K. MODEL
- 11 ANTI-THIEF LIGHT(-) FOR U.K. MODEL
- 12 WATER TEMPERATURE(-)

1. PLEASE REMOVE THE ORIGINAL METER AND INSTALL THE KOSO RADAR SERIES SPEEDOMETER, THEN FIX THE CABLE WIRE AND METER.  
 2. CONNECT THE RPM SENSOR WIRING TO THE IGNITION COIL POSITIVE ELECTRODE.

**CAUTION!** PLEASE MAKE SURE THAT THE IGNITION COIL POSITIVE ELECTRODE BEFORE CONNECTING THE RPM SENSOR WIRING! WRONG INSTALLATION WILL CAUSE THE METER BROKEN!