



- |  |                                    |
|--|------------------------------------|
| <b>1</b> NIGHT LIGHT BACK-LIGHT(+ 12V) | <b>9</b> POWER(DC+ 12V)            |
| <b>2</b> FLASH LIGHT-LEFT(+ 12V)       | <b>10</b> EMPTY                    |
| <b>3</b> GROUND(-)                     | <b>11</b> EMPTY                    |
| <b>4</b> HIGH BEAM(+ 12V)              | <b>12</b> FUEL GAUGE SENSOR(-)     |
| <b>5</b> OIL PRESSURE(+ 12V)           | <b>13</b> FLASH LIGHT-RIGHT(+ 12V) |
| <b>6</b> EMPTY                         |                                    |
| <b>7</b> EMPTY                         |                                    |
| <b>8</b> WATER TEMPERATURE(-)          |                                    |

1. PLEASE REMOVE THE ORIGINAL METER AND INSTALL THE KOSO RADAR SERIES SPEEDOMETER, THEN FIX THE CABLE WIRE AND METER.  
 2. WIND THE RPM SENSOR ONTO THE SPARK PLUG WIRE.

**CAUTION!** JUST WIND THE RPM WIRE ONTO THE SPARK PLUG WIRE, DO NOT CONNECT THEM! ALSO WE SUGGEST YOU TO REPLACE THE SPARK '12' IN THE MEANTIME.